



Toshiba Tecra 8200 RAM Replacement

Follow this guide to replace the RAM of you device.

Written By: Sally



INTRODUCTION


This guide demonstrates how to properly remove and replace a Toshiba Tecra 8200 RAM in order to preserve the function of the device.




TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-


Step 1 — Battery

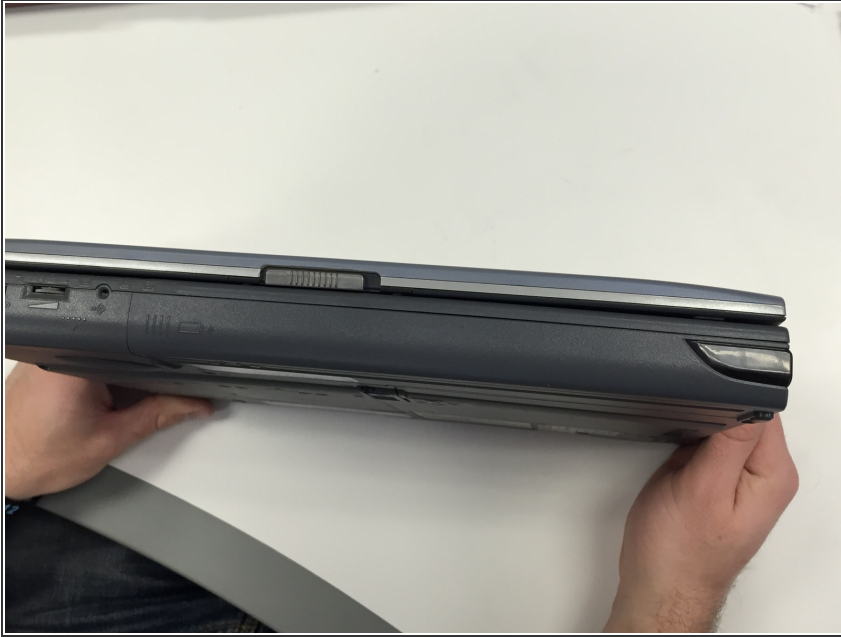

 Unplug the power cord and turn off the device to remove the battery.


- To remove the battery, flip the device, so that the bottom is facing upward.

Step 2

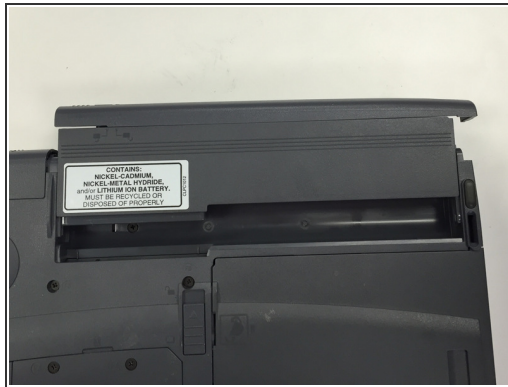



- Slide the battery to the right side until you hear a click.
- Once you hear the click, the battery must be released from the compartment.
- Remove the battery carefully.

Step 3 — RAM

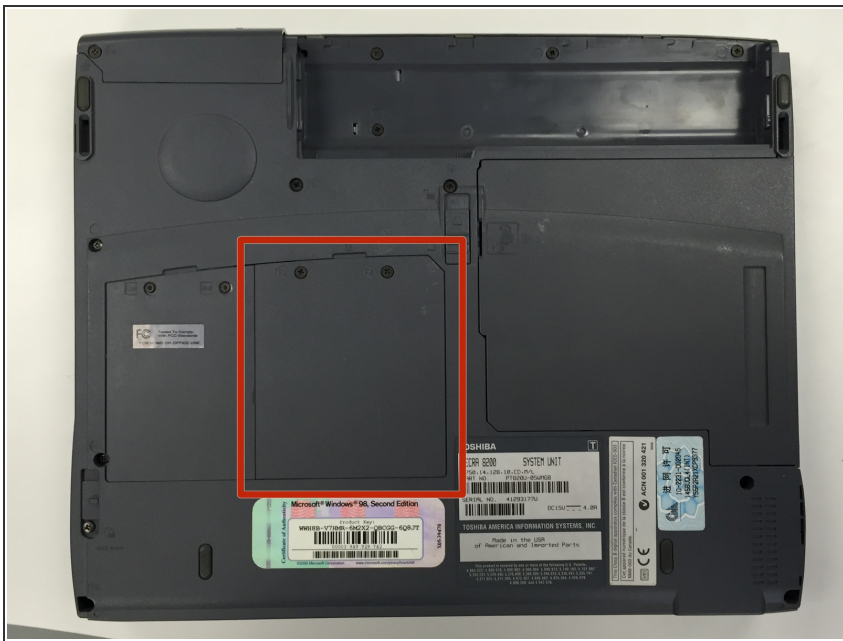



- Position device so the screen is face down.
- Locate RAM Panel.

Step 4

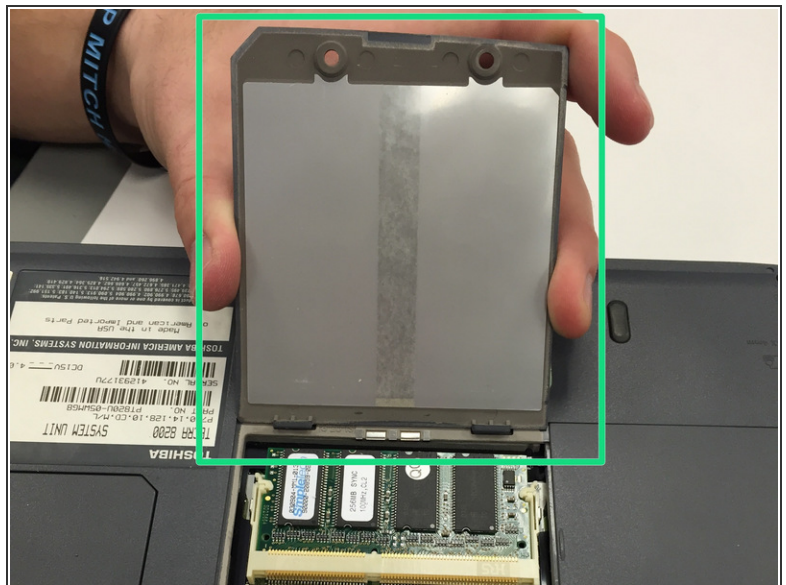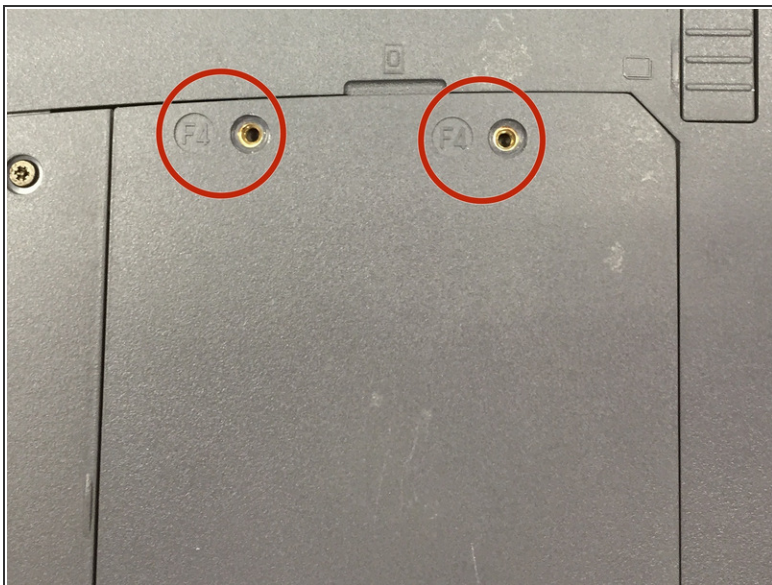

- Remove two screws labeled F4 with precision screwdriver (Phillips size #00).
- Set screws aside.
- Remove panel.

Step 5

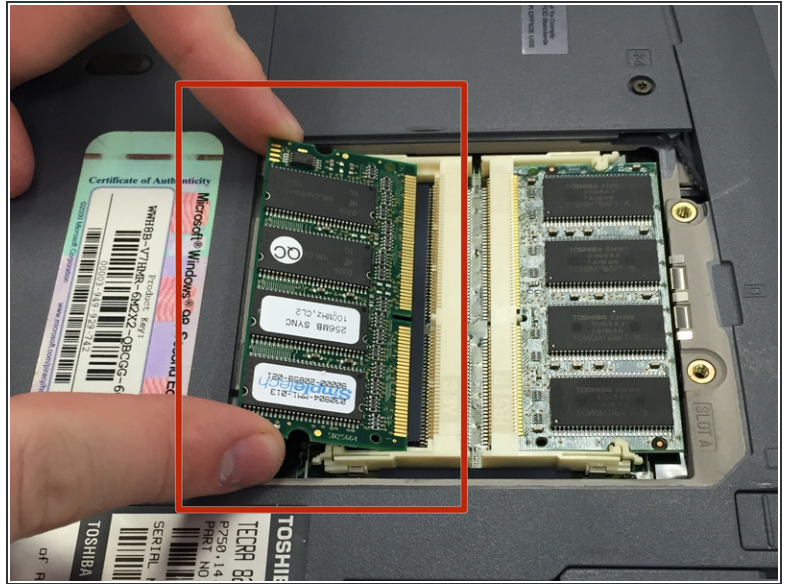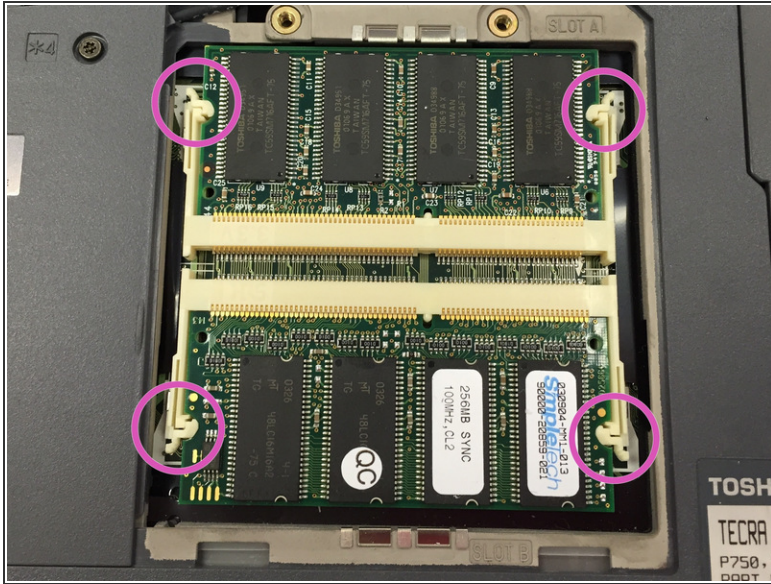

- Pinch clips on each side of RAM chips to release.
- Gently remove RAM chips at a 45 degree angle. Use a plastic opening tool if RAM chips do not pop open.

Step 6



- Insert new RAM chips and reassemble.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-30 01:49:35 PM.